

System Requirements:

- IBM compatible PC systems
- Microsoft Windows 2000/ME/NT/XP/Vista
- Microsoft Internet Explorer 5.0 or later
- USB/PS2 port

Supplied with the product:


The following items are included in the package. Please make sure all items are included as you open the package. If there is any item missing or damaged, please contact the reseller who sold you this product, or our support center.

- One Keyboard
- User's Manual
- Warranty Card

Installation

1. Turn off your computer
2. Connect the keyboard to the computer's USB port, depending on what connection the keyboard comes with.
3. Turn on your computer.
4. For Windows 2000/ME/NT/XP/Vista users, the hot keys will work automatically, so there is no need to install drivers.

Hot Key Buttons

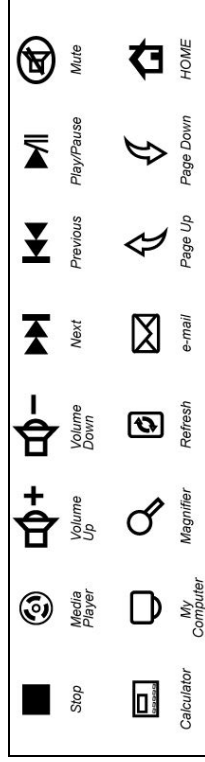

: Arrow Keys for Game Control Movement.

※ **CD player or applications like Microsoft Media Player must be set to be active.**

Note on using the keyboard

- Please do not use this product in an ashy, wet, or oily place.
- Please do not impact the unit or pull the cord with force.
- Outdoor use may damage the functions of this product. Indoor use is recommended.
- In case of maintenance of this product, please do not use thinner or benzene.
- Have a break after 30 minutes using keyboard continuously to prevent any temporary or permanent injury on wrist or other parts, which usually occurs after long-period operation.

Warranty

ATAKE warrants that product from its authorized distributor will meet the applicable product specifications and be free from all defects in design, assembly, material and workmanship. Please return the defective product to your retailer for free replacement. For more ATake warranty policy, please refer to the Warranty Card.

系統需求:

- IBM 相容的個人電腦系統
- 系統需支援 ACPI 或 APMII (以啟動電源快速功能鍵)
- Microsoft Windows 2000/XP/Vista
- Microsoft Internet Explorer 5.0 以上版本
- USB 接口

產品包裝內容:


請確認下列產品包裝項目, 若發現短少或內容不符時, 請向原購買處要求更換, 或連絡 ATake 客戶服務人員。

- 多媒體鍵盤
- 簡易手冊
- 產品保證卡

安裝使用

1. 關閉電腦
2. 將鍵盤接到個人電腦的 USB 接口
3. 啟動電腦
4. Windows 2000/XP/Vista 的操作系統不需驅動程式即可自動偵測新增硬體

快速功能鍵介紹

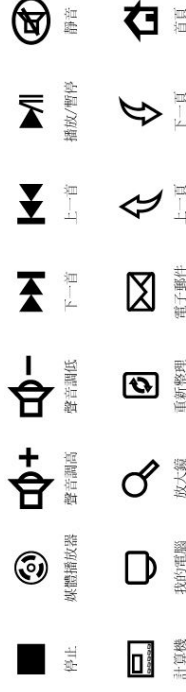

: 遊戲方向鍵

★ 多媒體功能需搭配 Microsoft Media Player 或其他音樂播放應用程式一起使用。

使用及保養注意事項

- 請勿於充滿灰塵、潮濕、或油漬的地方使用本產品
- 請避免撞擊或用力拉扯鍵盤電源線
- 室外使用可能造成損壞, 建議室內使用
- 請勿使用含苯成份的化學劑或稀釋劑擦抹本產品
- 使用本產品時, 請每隔 30 分鐘稍做休息, 以減少長時間使用及姿勢不當所引起的身體傷害

產品保固

● 由原廠提供之全系列電腦週邊產品, 其有限保證期限為自購買之日起 18 個月。外觀外殼及裝飾性的零組件機構受損不包括在本證明條款範圍內。所有保固資訊、產品功能、規格及服務內容細則有可能隨時修改, 請參考產品包裝內的產品保證卡。